



Braided Fence

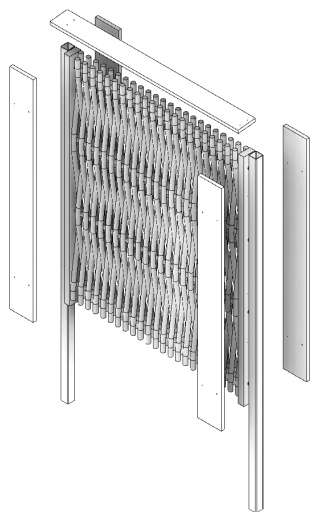



Installation steps

01 Posts installation

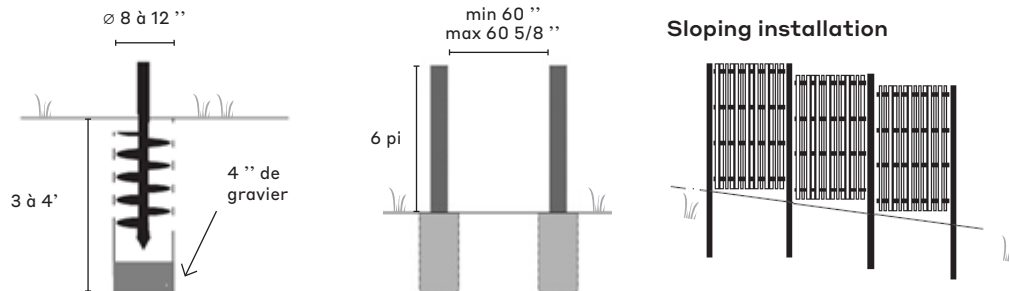

02 Panels installation


ON WOOD POSTS

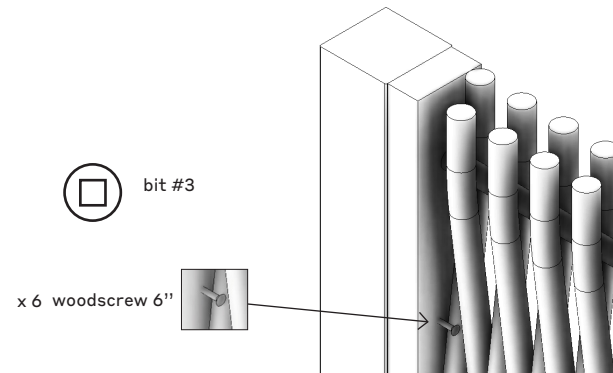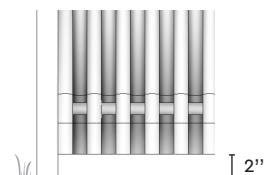

Equipment included

- Prefab willow panel 5'x6'
- Finishing plank 1"x6"X6' or 1"x6"X8 (not included)
- Selfdrilling screw 1/4"x4" (for metallic posts)
- Galvanised wood screw 3" (for wood posts)
- Galvanised woodscrew 2 1/2" (6 per plank)


INSTALLATION ON METALLIC POSTS

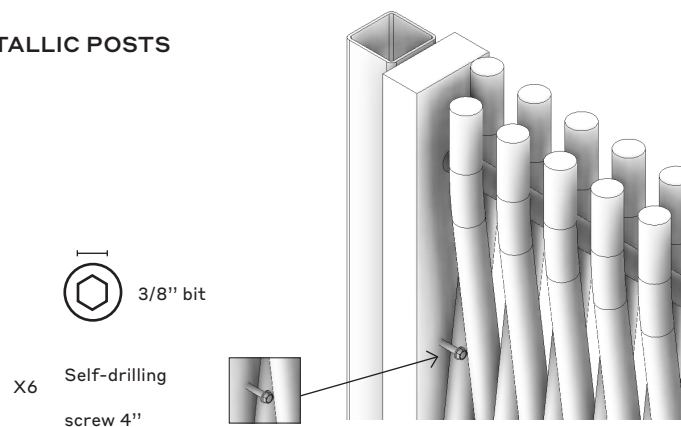


03

Finishing (optional)

The finish is the same on wood and metal posts

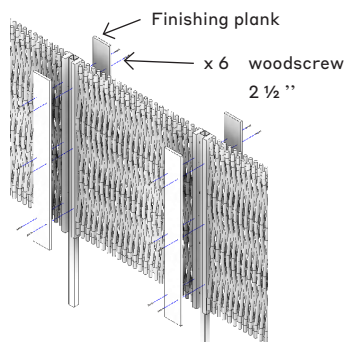

Fencing hat

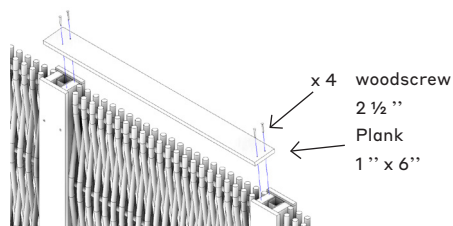

Aerial view



04

Door installation


Recommendation

Latch: D&D Technologies

Lokklatch regular

Hinges : D&D Technologies

Truclose heavy duty

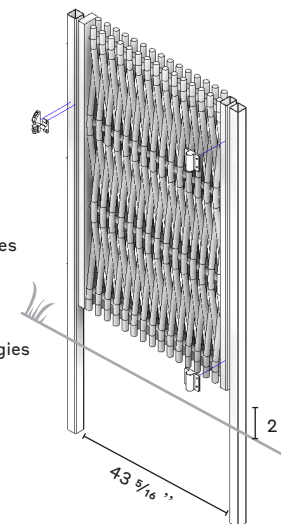


05


Shorten a panel




REMOVE THE SCREW THAT SECURES THE PIPE

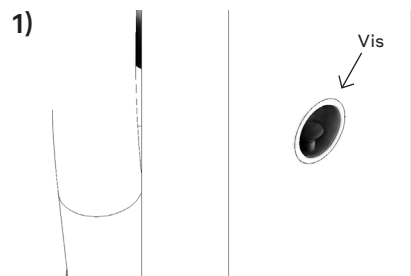


DEFINE WIDTH TO REACH

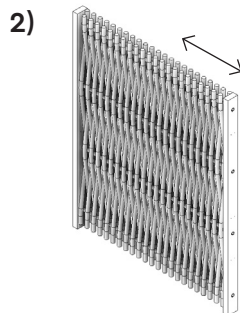


REMOVE THE NUMBER OF STEMS REQUIRED

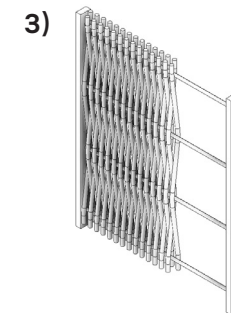

SLIDE THE FRAME

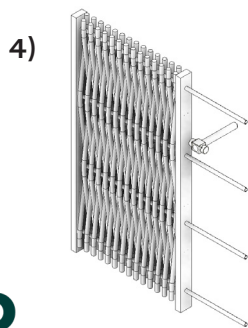

CUT THE PIPES

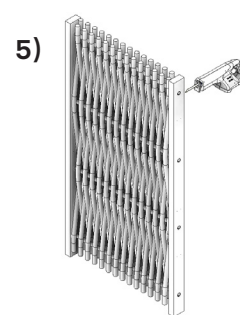

DRILL THE PIPE AND SECURE WITH A SREW

